



MODEL H5673 FIRE RESISTANT FLOOR SAFE ON CASTERS INSTRUCTIONS

Specifications

- 4-number combination lock with key assist.
- One interior drawer with key lock.
- Two interior shelves with one adjustable.
- Four heavy-duty casters for mobility.
- Rated at 1700° for 1 hour.
- Dimensions are 20" W x 18½" D x 26½" H.
- Shipping weight: 261 lbs.

Combination

--	--	--	--

⚠WARNING

- Do not allow anyone to be locked inside the safe or suffocation may occur.
- Do not allow anyone to climb on the safe or it could tip over and cause serious personal injury.

NOTICE

Grizzly cannot replace lost or stolen keys. Please contact your local locksmith in these situations.

If you need help with your new safe, call our Tech Support at: (570) 546-9663.

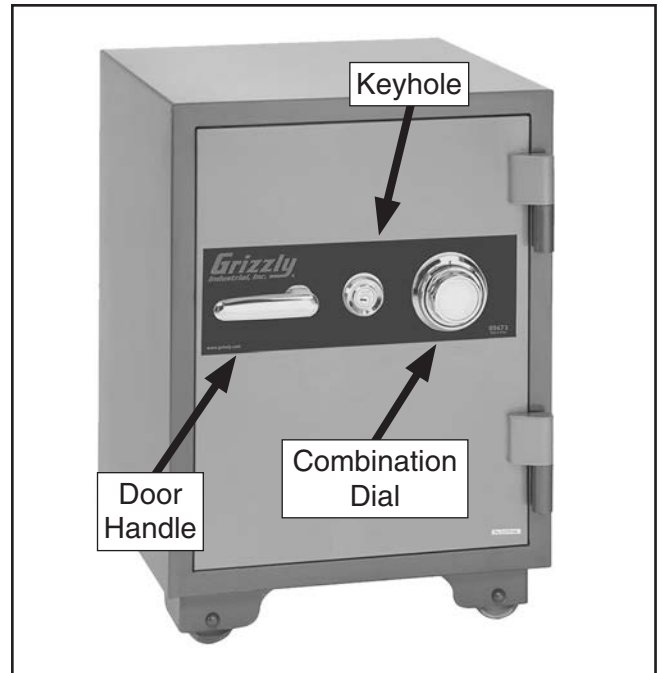


Figure 1. Model H5673 Floor Safe.

To open your safe:

1. Rotate the combination dial three rotations past the first combination number, then stop on it the fourth rotation, as illustrated in Figure 2.

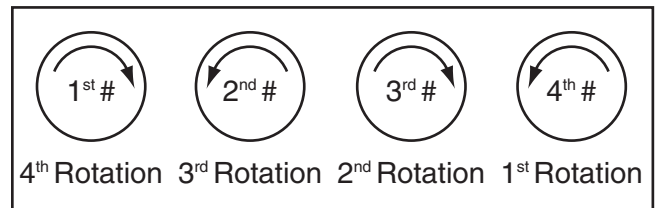


Figure 2. Sequence of dial rotation.

Continued on next page →

2. Turn the dial counterclockwise two rotations past the second combination number, then stop on it the third rotation.
3. Rotate the dial clockwise past the third combination number, then stop on it the second rotation.
4. Turn the dial counterclockwise to the fourth combination number.
5. Insert the key into the keyhole, then rotate it clockwise until it stops.
6. Turn the door handle and pull the door open.

To lock your safe:

1. Close the door and turn the handle parallel to the floor in the locked position.
2. Remove the key, then turn the combination dial a few revolutions in either direction to reset the locking tumblers and prevent the key unlocking the door.

NOTICE

Keep the safe keys and these instructions with the included combination in a separate secure location from the safe. Misplacing either the keys or the combination will render the safe unusable.

Maintenance

Clean the surfaces of the safe with a slightly damp cloth. If the hinges should develop a squeak, apply one or two drops of light machine oil to the hinge contact points.

